


Do not scale from this drawing.
 The Contractor shall be responsible for checking dimensions, tolerances & references.
 Discrepancies to be verified with Ecoscape UK before commencement of works.

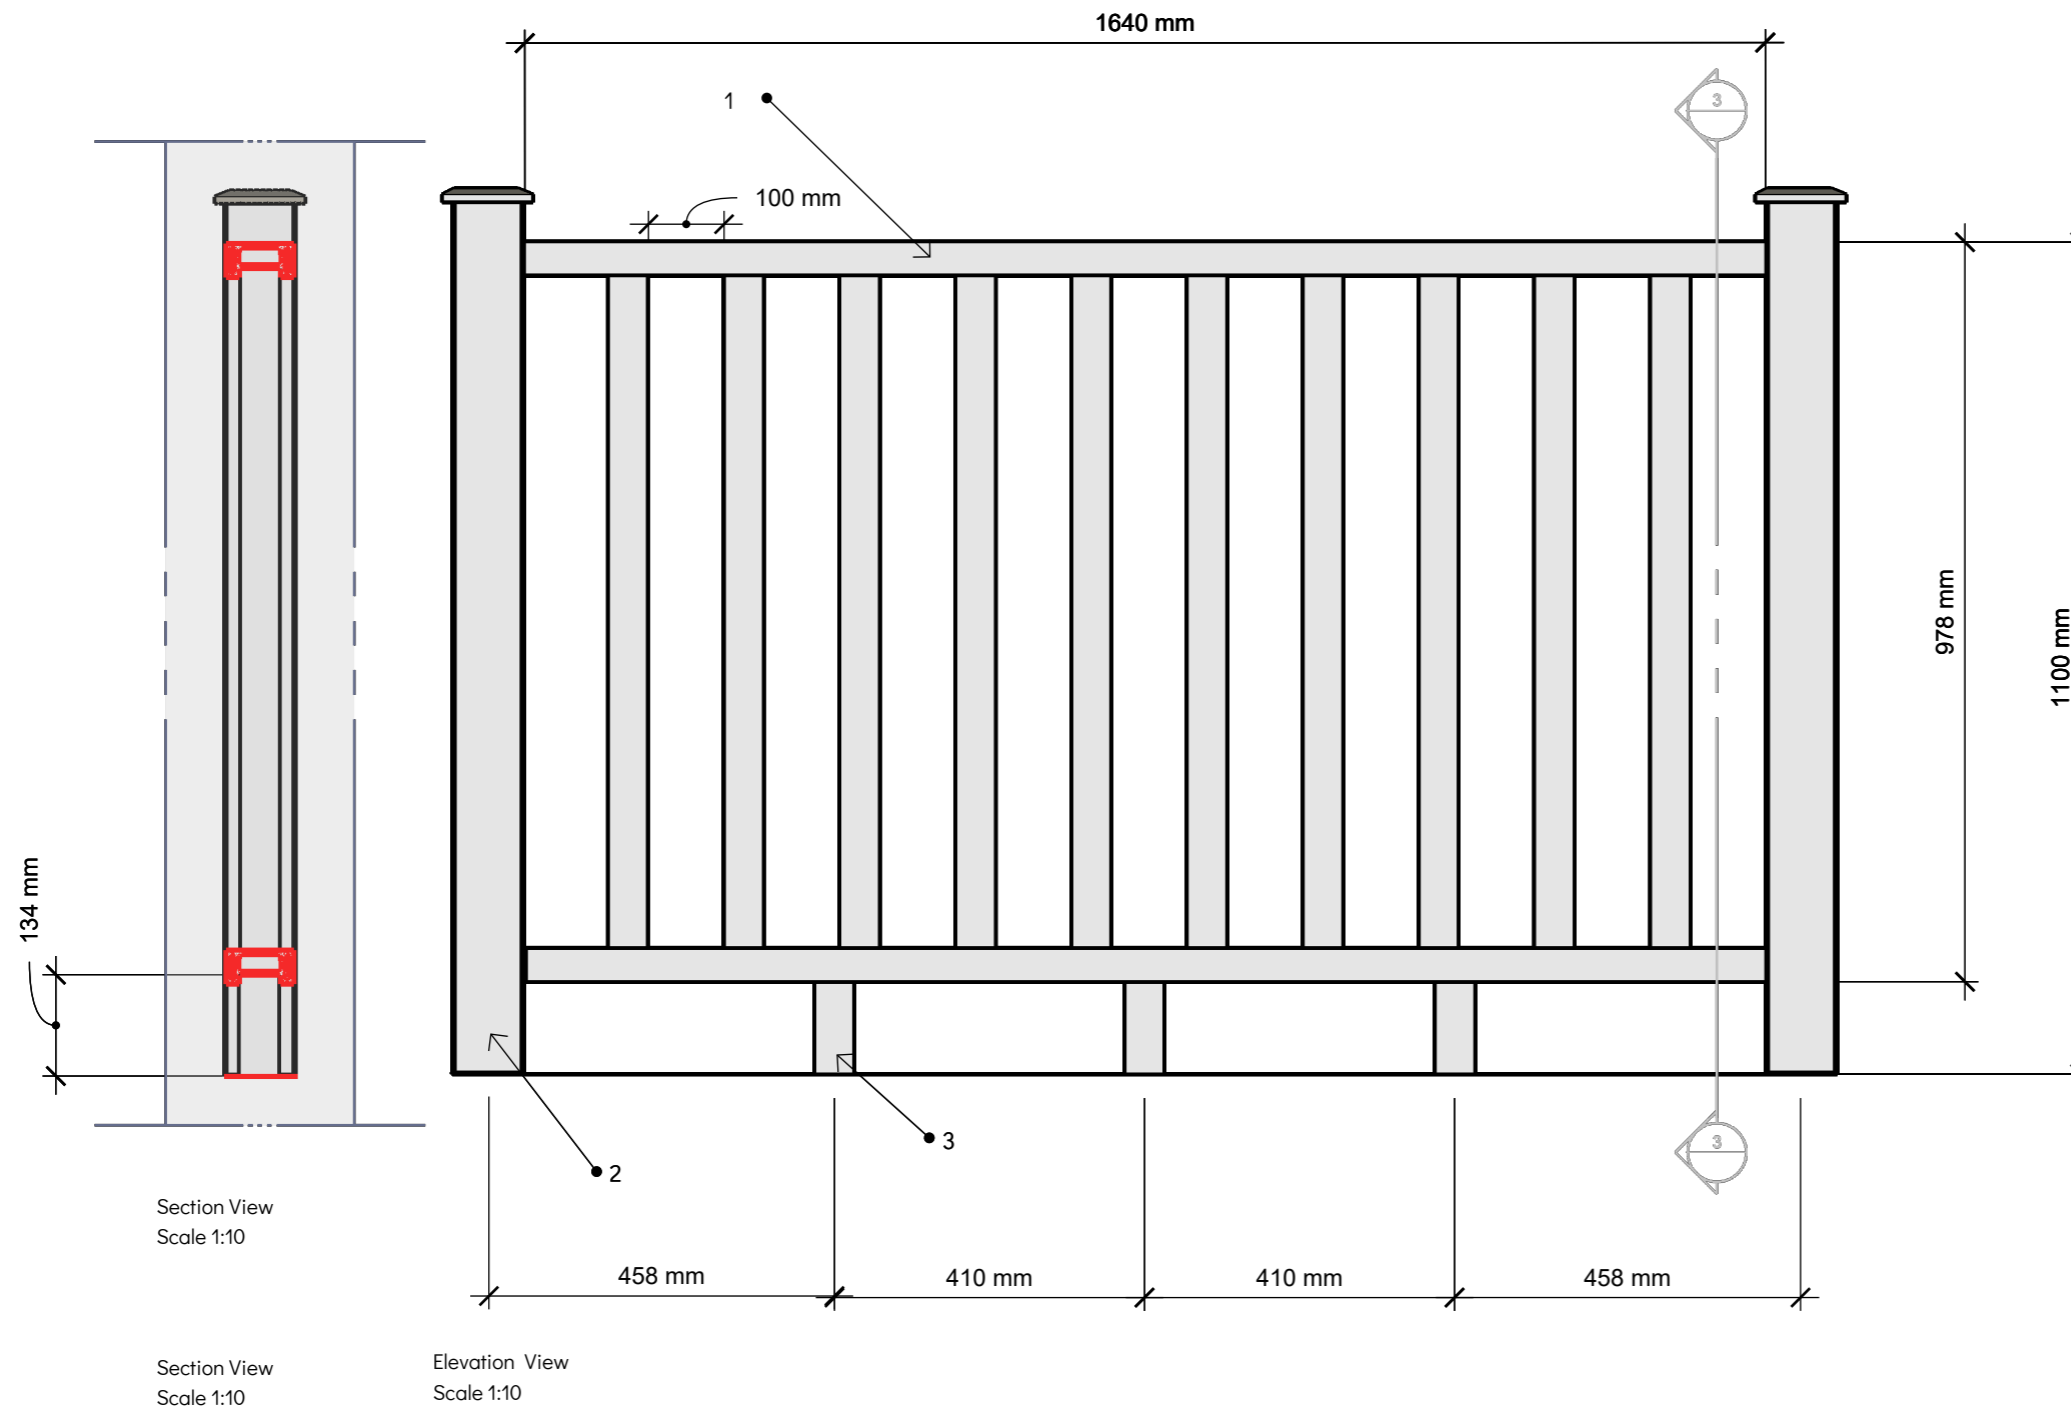

- 1: Kit Part 1: 2no. 1640mm handrails
10no. Spindles
- 2: Kit Part 2: 1no. Newel
1no. Post Cap
- 3: Cut down spindle - each bay requires
3no. cut down spindle sections to 134mm 6no.
spindle inserts, in order to convert to 1100mm high.

© 2022 Ecoscape UK Ltd